

KT-518

UNIVERSAL REMOTE

STOCK CODE:K0005117

KT-518**Model Code Table**

Brand	Model Code	Brand	Model Code
ALPIN	252-253	LG	197-200, 504
AUCMA	288-296	LIANGYU	233, 451
AUX	297-300	LOREN-SEBO	255, 471, 472
BOERKA	383, 434, 436-437	MACQUAY	234-237
CARRIER	203-209, 482-486	MIDEA	260-265
CHANGHONG	301-308	MITSUBISHI	001-045, 476-479
CHIGO	379-382	NORITZ	431
CHOFU	184-187	Panasonic National	138-154
CHUNLAN	345-350, 453	PANDA	378
CORONA	155-163	PHILCO	210-211, 487-490
CONROWA	377	PROTON	421-423
DAIKIN	171-183	RAYBO	362-367
DOCTOR	221, 449	Sabro	435, 506-508
DONGBAO	355-361	SAIJO DENKI	212-215
DONGXINBAO	413	SAMPO	424-426
Electrolux	216-220	SAMSUNG	188-196, 503
FUJITSU	127-137	SANYO	046-095
FUNAI	430, 481	SASUKI	254, 470
GUQIAO	244, 491	SHANGLING	384-388, 444-445
GALANZ	371-372	SHANXING	392, 449
GLEE	398-399	SHARP	096-106
GOLDSTAR	201, 466-469	SHENGFENG,SHUANGLU	376, 480
GREE	309-316	SHINCO	351-354, 454-456
HAIER	266-272	SHUANGLU	404-407
HISENSE	332-335	SONGGE	428-429
HITACHI	118-126, 500, 501	SOVA	409-410
HUABAO	336-344	SUMMER	427
HUAKE	408	SUNDURG	257, 505
HUAMEI	402, 460-465	TADIRAN	246-251
HUALING	317-325	TATUNG	419-420
HUIFENG	370	TCL	273-281
HUIKANG	368, 441-443	TECO	256, 473-475
HYUNDAI	202, 433	TIANDI, MICOM	415
JDC	373, 440	TOSHIBA	107-117, 493-499
JIANGNAN A/C	432	TRANE	227-232
JINDA	414	UNI-AIR	222-224, 450
JINSONG	389-391, 446-448	WEILI	393-396
JOHSON	245, 492	Whiripool	164-170, 502
KANGLI	374-375	XILENG	411-412
KELON	282-287	XINLE	400-401
KLIMATAIR	225-226, 452	YANGTZE	403
KOLIN	416-418	YINYAN	326-331, 258-259
KONKA	397, 457-459	YORK	238-243
LEHUA	369, 438-439		

Big capacity
Accurate clock display
Special timer on/off
Memory code

+ 500
codes



Model
KT-518

MADE IN CHINA

UNIVERSAL REMOTE

Air-conditioner Remote Control's Pilot


KT-518 Multi-Function Air-conditioner Remote Control user's Guide

Product Description

KT-518 integrates 100 brands of more 508 models in one remote controller. It is the latest product of our company. Big capacity, low power, good quality and convenient to use. You can input brand code directly, or search the brand code automatically. Once selected, the code was stored in machine automatically for ever. Clock accurate, it has Timer on and timer off function. The perfect design provides you with convenience. So it is your best choice. Please read this user's Guide carefully before using it, which will be a great help to use the remote control for you.

Brand Code Setting of Remote Control

1. Open the batteries cover. Put 2 AAA (UM-4,R03) batteries as per polar indicated on battery cabin.
2. Find the brand code from "Brand Code List", If there are many codes for one brand, please use the first code, if it does not work, then use the second code. Repeat above steps until it is work. E.g. for SANYO, you should try 046 first, if it does not work, then try 047,048---.095.
3. Press "SEL" key, brand code on LCD will flash. Press CODE "+" or "-" key until required brand code appears. Then, press "ENTER" key, the brand code stops flashing. Aim at air-conditioner by pressing ON/OFF key, you can remote control your air conditioner.

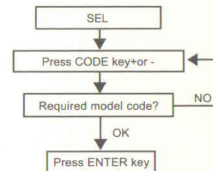

Auto Search setting of Remote Control

If you do not know brand of air conditioner or you can not find required brand from "Brand Code List", please do the following steps:

1. Press "SEL" key, brand code on LCD will flash. Let the remote control aim at air conditioner, press "SEL" key again and again. Press it once, brand code adds 1 by automatically and emit corresponding ON/OFF signal. Press and release until air conditioner receives signal and produces buzzer sound. Then press "ENTER" key.
2. After turning on the air conditioner, try other function keys. If they do not work, repeat above steps until it is correct.



Clock setting of Remote control

1. Press "clock" key, the clock on LCD will flash.
2. Press "TIME +" or "TIME -" key, tune to current time.
3. Press "clock" key again, the clock on LCD stops flashing, the setting is over.
(The auto-setting is also finished in 5 seconds while you do not press "clock" key.)

Timer on/off setting of Remote control

Timer on: you can set timer on, only after turning off your air conditioner.

1. Press the "TIMER ON" key, the LCD displays the clock signal ⌚ and time flashing.
2. Press "TIME+" or "TIME-" key; adjust the time when you want to make the air conditioner turn on by automatically.
3. Time flashing will stopped after 5 seconds. The LCD displays current time and clock signal ⌚. Now setting finished.

Timer off: you could set timer off, only after turning on your air conditioner.

1. Press the "TIMER OFF" key, the LCD displays the clock signal ⌚ and time flashing.
2. Press "TIME+" or "TIME-" key, adjust the time when you want to make the air conditioner turn off by automatically.
3. Time flashing will stopped after 5 seconds. The LCD displays current time and clock signal ⌚. Now setting finished.

NOTE

1. If press the "TIMER ON" or "TIMER OFF" key while the time of timer is flashing, timer is cancel.
2. After timer setting is finished, you should make the remote control's emit directs to your air conditioner's receiving location in available distance. If not, it can not work.
3. If you want to watch the time of timer, you should press the "TIMER ON" or "TIMER OFF" key, the LCD will display the time of timer and after 5 seconds it will display current time.

Attention

1. Generally, the battery can be used for one to two years. If it is not used for a long time, remove the battery so as to avoid leakage liquid of the battery to damage the machine. When the LCD looks dim, please change batteries. (New and old batteries can not be used together) After the batteries are replaced every time, it is not necessary to set brand code again.
2. If abnormal situation appears because of not correct use. Please put pen tip or other item into "Reset" hole. Press it to restore normal status. This time it is necessary to set clock again and you need not set brand code again.
3. As usual the LCD only display the time. When you want find the brand code, press "Enter" key, and the brand code display on LCD. After 5 seconds it will return to display current time.
4. Check carefully that there is no barrier between remote controller and air condition when the timer on/off doesn't work. It is effective only when the air conditioner receives the timer on/off signal from remote controller.
5. The manufacturer keeps the right to change the parameter and function of product

Technical Parameters

Controllable distance : Large than 8 meters
Power supply voltage: DC 3 V
Battery model: Battery AAA(UM-4, R03) x 2
Dimension: L127mm x W48mm x D22mm
Weight: App'ox66.5g(excl.the batteries)