

KT-N898

2000 In 1

Brand	Model Code
ALPIN	0252, 0253, 0764, 1277, 1789
AUCMA	0288-0296, 0462, 1313, 1998
AUX	0297-0300, 0451, 0474, 0475, 0812, 1987
BANGSHEN	0264, 1288, 1800
BOERKA	0383, 0434, 0436, 0437, 1407, 1972
CARRIER	0203-0209, 0456-0458, 0482-0486, 0563-0565
CHANGHONG	0301-0308, 0813, 1843
CHIGAO	0379-0382, 0489, 0515, 1403, 1916
CHOFU	0184-0187, 1209, 1723
CHUNLAN	0345-0350, 0450, 0453, 1373
CORONA	0155-0163, 0459, 1180, 1995
CONROWA	0377, 1401, 1913
CONSUL	0463, 0975
DAEWOO	0203-0209, 0406, 0715, 1942
DAIKIN	0171-0183, 0566, 0577, 0583, 0685, 1707
DOCTOR	0221, 0449, 1245, 1985
DONGBAO	0355-0361, 1385, 1891
DONGXINBAO	0413, 0925, 1654
Electrolux	0216-0220, 0569, 1245, 1752
FEDDERS	0498, 0499, 0528
FRESTECH	0277, 0519, 0520, 0789
FUJITSU	0127-0137, 0464, 0552-0554, 1152
FUNAI	0430, 0481, 1505, 1966
GALANZ	0371, 0372, 0521, 0883, 1908
General	0128-0136, 0639, 0976, 1161
GUQIAO	0244, 0291, 1268, 1827
GLEE	0398, 0399, 0910, 1935
GOLDSTAR	0201, 0466-0469, 0979, 1737
GREE	0309-0316, 0482, 0512, 0513
HAIER	0266-0272, 0453-0455, 0778
HISENSE	0332-0335, 0517, 0847, 1359, 1868
HITACHI	0118-0126, 0630, 1145
HUABAO	0336-0344, 1360, 1878
HUAKE	0408, 0920, 1944
HUAMEI	0402, 0460-0465, 1426, 1999
HUALING	0317-0325, 0452, 0964
HUIFENG	0370, 0882
HUIKANG	0368, 0441-0443, 1392, 1979
HYUNDAI	0202, 0433, 0480, 1226, 1969
JDC	0373, 0440, 0952, 1909
JIANGNAN	0432, 1456
JINDA	0414, 0926, 1950
JINSONG	0389-0391, 0446-0448, 1984
JOHSON	0245, 0492, 1269, 1516
KANGLI	0374, 0375, 1399, 1910
KELON	0282-0287, 0473, 0485-0488
KLIMATAIR	0225, 0226, 0452, 0737, 1761
KOLIN	0416-0418, 1441, 1952
KONKA	0397, 0457-0459, 1933
LG	0197-0200, 0514, 1026, 1733
LIANGYU	0233, 0451, 0745, 1257

Universal A/C Remote Control

Brand	Model Code
LITTLE DUCK	0015-0020, 0530, 1043
LOREN-SEBO	0255, 0471, 0472, 0767
MACQUAY	0234-0237, 0465, 0746, 1773
MICOM	0415, 0927, 1951
MIDEA	0260-0265, 0526, 1289, 1976
MITSUBISHI	0001-0045, 0476-0479, 0522, 0523, 0568, 0582, 1502
NORITZ	0431, 1455
PANASONIC National	0138-0154, 0483, 0490-0492, 0653, 1507
PANDA	0378, 0890
PHILCO	0210, 0211, 0487, 0488, 1746
PROTON	0421-0423, 0933, 1958
RAYBO	0362-0367, 1386, 1898
ROWA	0369, 0438, 0439, 0494, 0527, 0531, 1393
Sabro	0435, 0506-0508, 1018, 1971
SAIJO DENKI	0212-0215, 0724, 1750
SAMPO	0424-0426, 1448, 1961
SAMSUNG	0188-0196, 0516, 0518, 0700, 1726
SANYO	0046-0095, 0529, 0530, 0558, 1582
SASUKI	0254, 0470, 0766, 1494
SHANGLING	0384-0388, 0444, 0445, 1980
SHANXING	0392, 0449, 1416, 1985
SHARP	0096-0106, 0525, 0609, 1640
SHENGFENG	0376, 0480, 1504, 1912
SHINCO	0351-0354, 0454-0456, 1887
SHUANGLU	0376, 0404-0407, 0480, 1941
SHUAIKANG	0288, 0800
SONGGE	0428, 0429, 1453, 1964
SOVA	0409, 0410, 0921, 1434
SUMMER	0427, 1451
SUNDURG	0257, 0505, 1017, 1793
SWAN	0434, 0477, 0516, 0524, 0946
TADIRAN	0246-0251, 0758, 1275
TATUNG	0419, 0420, 0932, 1955
TCL	0273-0281, 0476, 0493, 0570, 0786, 1305
TECO	0256, 0473-0475, 1792
TIANDI	0415, 1439
TOSHIBA	0107-0117, 0479, 0489, 0561, 0562, 1001, 1643
TRANE	0227-0232, 0739, 1768
UNI-AIR	0222-0224, 0450, 0734, 1986
Wan bao	0138-0152, 0666, 0995, 1177
WEILI	0393-0396, 0907, 1420, 1929
Whirlpool	0164-0170, 0502, 0677, 1760
WINIA	0481, 0550, 0993
XILENG	0411, 0412, 0924, 1947
XINLE	0400, 0401, 0913, 1425, 1936
YANGZI (YAIR)	0403, 0915
YINYAN	0258, 0259, 0326-0331, 0478, 0838
YORK	0107, 0238-0243, 0573, 0750, 1266
Zhen bao	0129-0137, 1151, 1488, 1664

KT-N898

Universal A/C Remote Control

STOCK CODE:K0005228

- LCD background light display
- Thermometer function
- Clock function
- Unique function of "Intelligent cool" and "Intelligent heat"
- Patent of code setting--numeric input directly



KT-N898

Universal A/C Remote

2000 In 1

Control 99.99 percent of A/Cs in the world

MADE IN CHINA
NO.K-E-00133

KT-N898 Universal A/C remote control user's Guide

Product Description

KT-N898 is a new product with the patent of code setting which is invented by our engineers. You can input the numeric keys (0-9) for the code required directly, visual and convenient, quick and efficient. It has clock accurate, timer on and off, room temperature display, conversions between Celsius and Fahrenheit degree, Sleep function, code memory and also has unique function of "intelligent cooling" "intelligent heating". So it is your best choice.

Please read this manual carefully before using, which will be a great help for you to use the remote control.

The remote control can be used after setting. Pull side cover of remote control down, put 2 AAA (VM-4, R03) batteries as per polar indicated on battery cabin.

Patent code set up

1. Find out the codes from code table, there are many groups codes of each brand. Please try the first group, if it does not operate your equipment, try the second, and do it like this until the codes can operate your equipment. Ex: ALPIN, you can choose 0252, if it does not work, please try the 0253 etc.
2. Press the "SELECT" key, the code on LCD will flash. Enter the 4 digit code in turn. Ex: "0252", press the "0" key, "0" stop flashing, the last three numbers flashing, then press the "2" key, the last two numbers flashing, and press the "5" key, the last number flashing, finally press the last number "2", all of the 4 digit code "0252" stop flashing, code entry is now complete. The remote control confirms the code automatically, and you can use the numeric key normally. You can operate your air conditioner now.
3. After the air conditioner on, try other function keys, if they do not work well, please choose the next group of code until all the functions can work. The remote control is 2000 codes in one, so it is invalid when the code greater than 1999.

Auto-search code setting

If you do not know the brand of your air conditioner, or if your brand is not listed in the code table, please operate as per following steps:

1. Put the remote control aim at your air conditioner, press the "SELECT" key for 5 seconds and then release, remote control is entering the auto-search status, emit the signal continuously, the code flashes and increases. While the air conditioner receives the signal, and send one buzzer, press any key to confirm.
2. Try other function keys, if they do not work, repeat above steps until it is correct.

Using of "intelligent Cooling" "intelligent heating"

In the summer, press the "intelligent Cooling" only, the air conditioner will be cooled immediately. In the winter, press the "intelligent heating" key only, the air conditioner will be heated immediately. In both status, the air conditioner will let the heating and cooling in a comfortable temperature automatically, and the fan and swing are all automatic. At the same time, it also can adjust the temperature by "Temp.+" "Temp.-" keys as your requires. These two intelligent keys are very good for the children and the old.

Clock set up

1. Press the "clock" key, clock signal flashes.
2. Press "Time +/Time -" key, adjust to the current time.
3. Press the "clock" key again, clock signal stop flashing, the time setting finishes. (If you do not press the "clock" key, it also finishes automatically after 15 seconds)

Timer on

1. Press the "TMR ON" key, the time on LCD flashes
2. Press "TIME +/-" key, adjust the time when you want to make the air conditioner turn on automatically
3. Time on LCD will stop flash after 15 seconds. Setting is complete

Timer off

1. Press the "TMR OFF" key, the time on LCD flashes
2. Press "TIME +/-" key, adjust the time when you want to make the air conditioner turn off automatically
3. Time on LCD will stop flash after 15 seconds. Setting is complete

NOTE

1. If press the "TIMER ON" or "TIMER OFF" key twice, timer is cancel.
2. After timer setting is finished, you should make the remote control's emit directs to your air conditioner's receiving location in available distance. If not, it can not work.
3. If you want to watch the time of timer, you should press the "TIMER ON" or "TIMER OFF" key, the LCD will display the time of timer and after 5 seconds it will display current time.

Room temperature display

Press "Room T" key, it shows current room temperature and as a thermometer

Conversions between Celsius and Fahrenheit degree

Press the "C/F" key can convert the display between Fahrenheit and Celsius degree.

Sleep function

In the summer, press the "SLEEP" key while it is in cool mode, the temperature will be raised 1°C per hour in the first 2 hours and will be shut off by itself after 8 hours. In the winter, press the "SLEEP" key while it is in heat mode, the temperature will be fall 1°C per hour in the first 2 hours and will be shut off by itself after 8 hours. After setting sleep function, please let remote aim at the receiver of your air conditioner in the effective distance, otherwise the function of "SLEEP" is null.

Attention

1. If it is not used for a long time, remove the battery to avoid leakage liquid of the battery to damage the machine. When the LCD looks dim, please change batteries. (New and old batteries can not be used together) After the batteries are replaced every time, it is not necessary to set model code again.
2. As usual the LCD only display the time when pressing model codes "Enter" key, you can find the code and it is showed on LCD. After 5 seconds it returns time.
3. Check carefully that there is no remora between remote controller and Air conditioner when the time on/off doesn't work. Because the operation is effective only when the air conditioner receives the timer on/off signal from remote controller.
4. The manufacturer keeps the right to change the parameter and function of product.

Technical Parameters

Controllable distance : Large than 8 meters
Power supply voltage: DC 3 V
Battery model: Battery AAA(UM-4、R03) x 2
Dimension: L165mm x W55mm x D25mm
Weight: Approx100g(excl.the batteries)